

PRZ-5500 Assembly Instructions

1



2



3



4



5



6



 
7




8




9

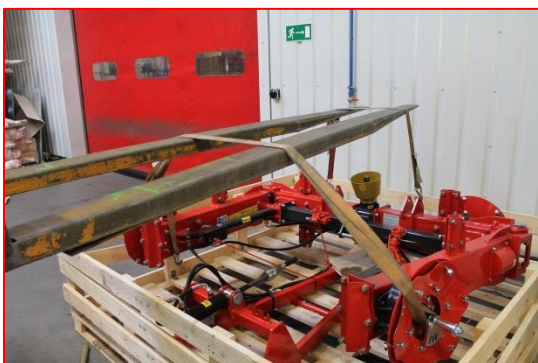

10

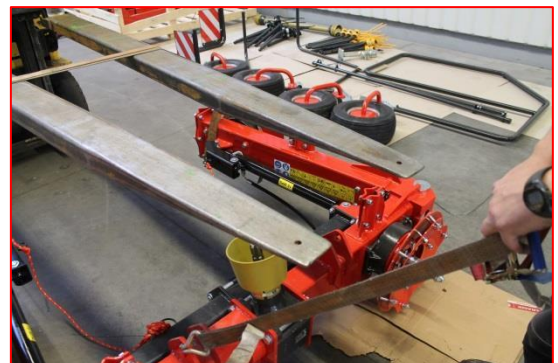


11

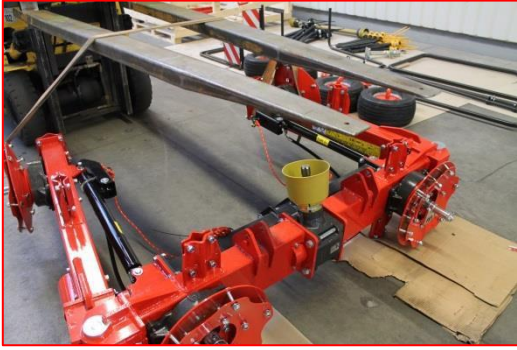 

12



 13

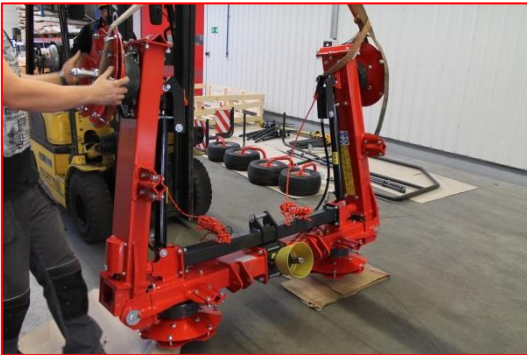

14



 
15



16



17

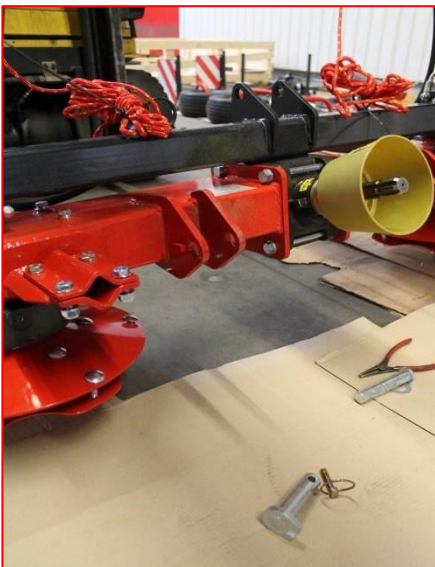

18



19




20






**Important:
Tire Assembly instructions.**

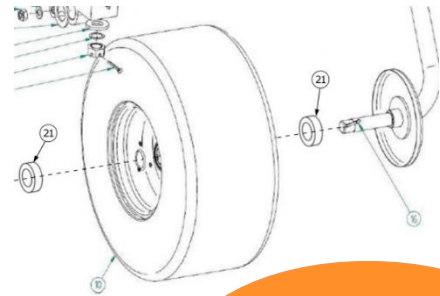

Outside tires with spindles

Hub Covers on the inside of outer and inner baskets to protect spindles

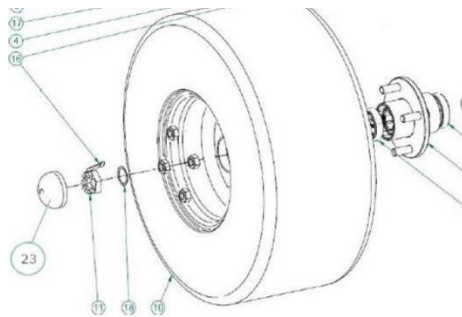


Inside tires with High-Speed Hubs


21



 
22

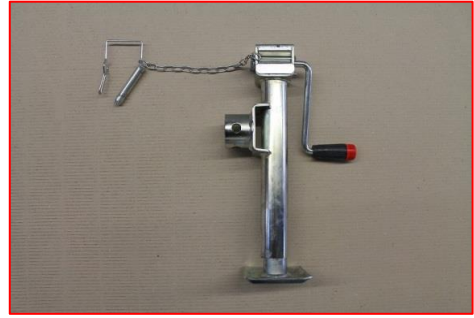

23

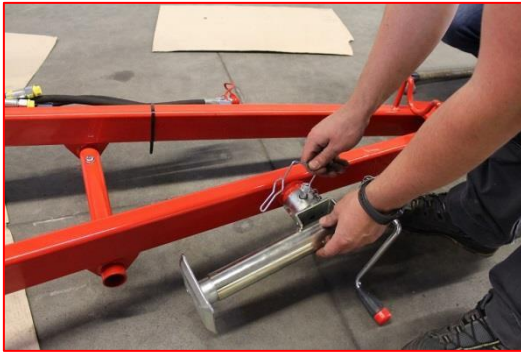 

24

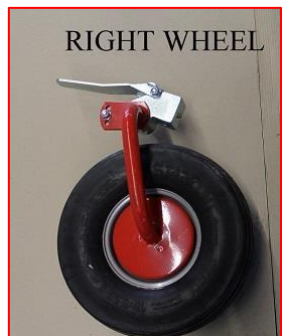 

25



26



 
27



28



27

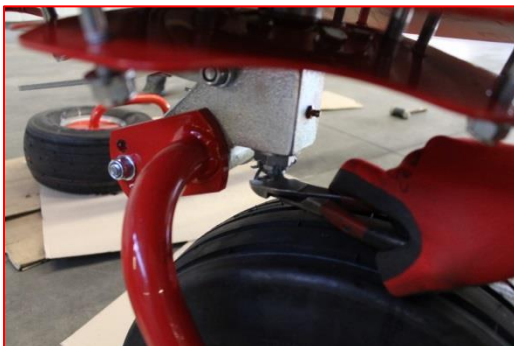

28



29



30



31



32




33

34





37

38

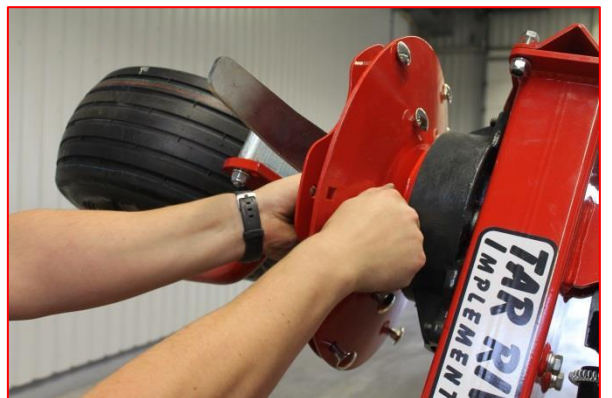


39

 
40

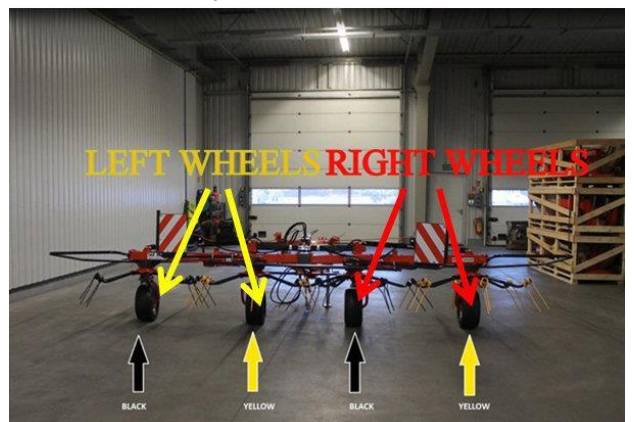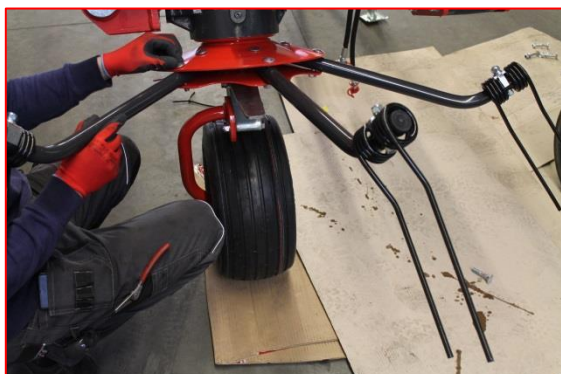


41

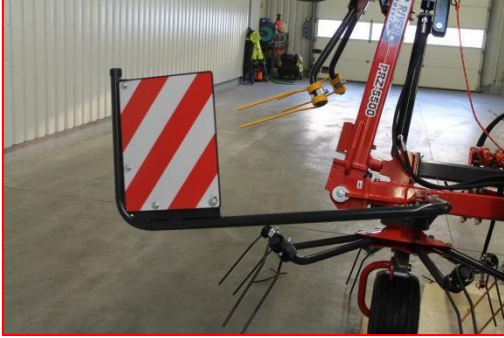

42

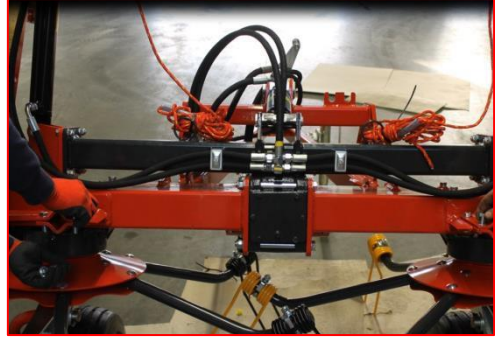

43

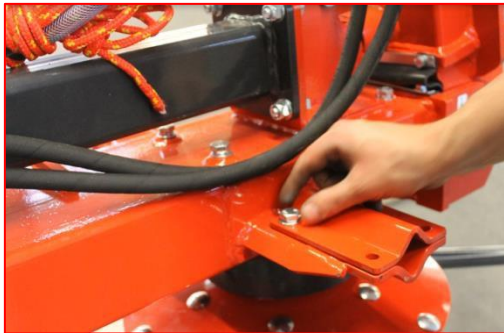 


44




45



 
46

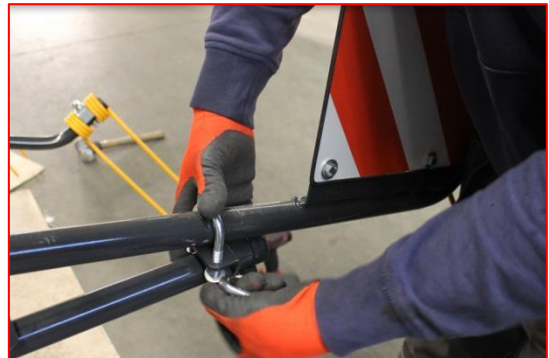


49

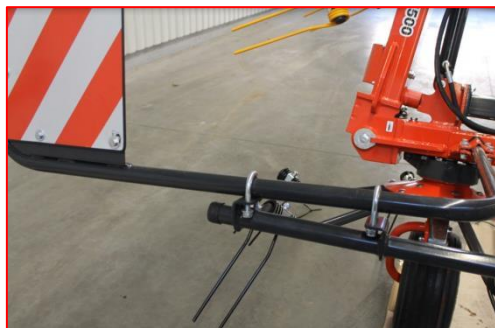 

50

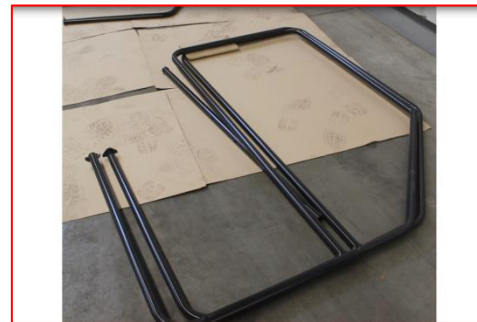 

51

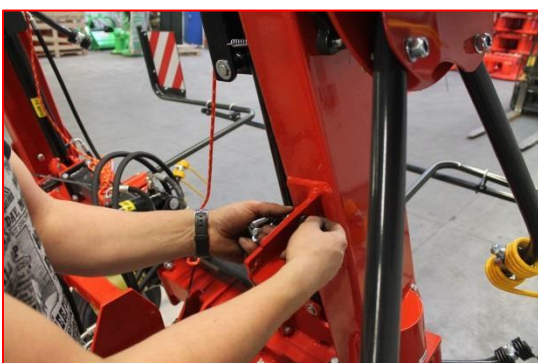 

52



 
53



54



55

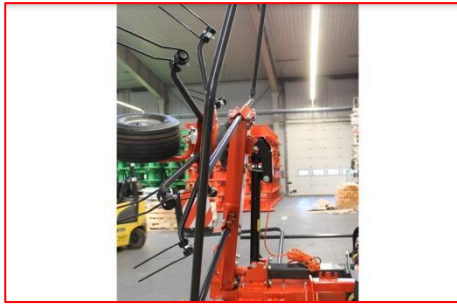

56



57



 
58




59



60

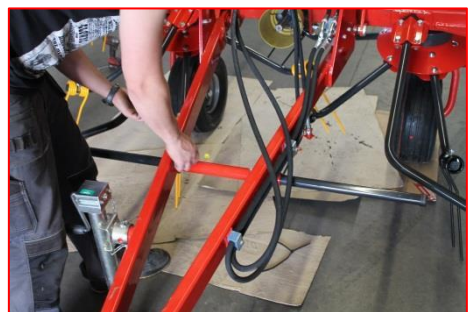

61

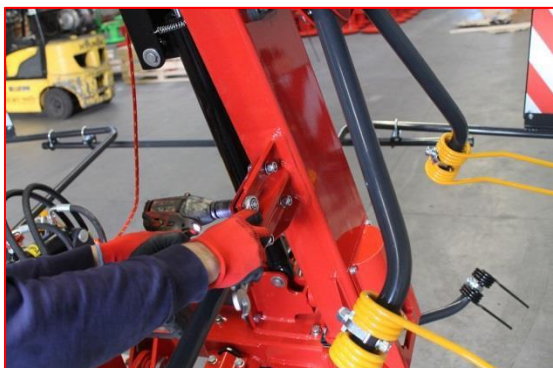

62



63



64



65



66



67



68

